



175 NW Washington Street
Lake City, Florida 32055, USA
Web: www.diverite.com
Phone: 386.752.1087
Fax: 386.755.0613

LT6079-CORD LED Flashlight Cord Adapter

Product description

The LED Flashlight Cord Adapter quickly turns the LED Flashlight into a canister light. The body of the flashlight still holds the battery carrier. Simply place this adapter between the flashlight body and the head. In this setup, the body can be placed in a pocket and the head is now lighter and easier to hold.

Using the cord adapter


Load the battery carrier just as you would for the flashlight. Align the contacts of the battery carrier with those of the contact block on the adaptor, just as you would with the flashlight.

Turn this assembly down until it stops. There is no need to over-tighten this assembly.

Next, attach the knurled adaptor body to the LED head. Align the contacts and turn the head into the adaptor body. Turning it all the way in will activate the light. Use this portion of the cord adaptor to turn the light on and off. As with any twist activate light, to avoid flooding, when turning the light off, turn it until the light goes out.

Inserting the phono plug

If the phono plug should come out while attaching the cord adapter, simply align the phono plug and socket and then snap the piece back into place.

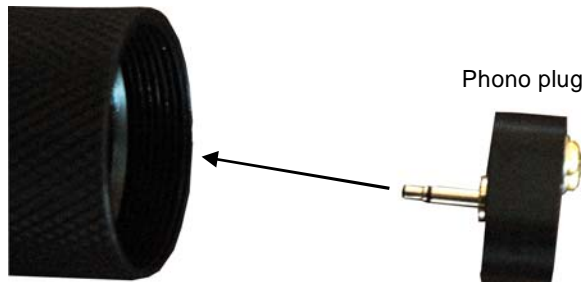

175 NW Washington Street
Lake City, Florida 32055, USA
Web: www.diverite.com
Phone: 386.752.1087
Fax: 386.755.0613

LT6079-CORD LED Flashlight Cord Adapter

Product description

The LED Flashlight Cord Adapter quickly turns the LED Flashlight into a canister light. The body of the flashlight still holds the battery carrier. Simply place this adapter between the flashlight body and the head. In this setup, the body can be placed in a pocket and the head is now lighter and easier to hold.

Using the cord adapter

Load the battery carrier just as you would for the flashlight. Align the contacts of the battery carrier with those of the contact block on the adaptor, just as you would with the flashlight.

Turn this assembly down until it stops. There is no need to over-tighten this assembly.

Next, attach the knurled adaptor body to the LED head. Align the contacts and turn the head into the adaptor body. Turning it all the way in will activate the light. Use this portion of the cord adaptor to turn the light on and off. As with any twist activate light, to avoid flooding, when turning the light off, turn it until the light goes out.

Inserting the phono plug

If the phono plug should come out while attaching the cord adapter, simply align the phono plug and socket and then snap the piece back into place.

