



# Dive Rite

---

## Short Deluxe Harness

Item # BC1080Short

This harness utilizes nylon webbing for strength and comfort.

It also features tubular webbing sleeves to minimize wear wherever the harness would normally be in contact with a metal backplate.

### Packaging contains:





- 1) 5.5 ft of 2" Harness webbing
- 2) 4 tubular sleeves (3.5" each)
- 3) 4 Stainless-steel Belt Slides
- 4) 2 3 ft sections of harness webbing, with pivot rings
- 5) 2 Plastic 2" grip-type Belt Slides
- 6) 2 Stainless-steel low-profile D-rings
- 7) 2 Stainless-steel bent low-profile D-rings
- 8) 1 Stainless-steel waist-strap release belt-buckle
- 9) Left and Right Chest-strap Assembly

This Dive Rite Harness fits on all Dive Rite backplates, and is designed for shorter torsos.

Specifically-designed for technical diving with a rigid backplate, swivel points on the shoulder straps and a chest strap ensure a comfortable fit.

**\*\* Crotch Strap not included\*\***

# Threading Short Deluxe Harness

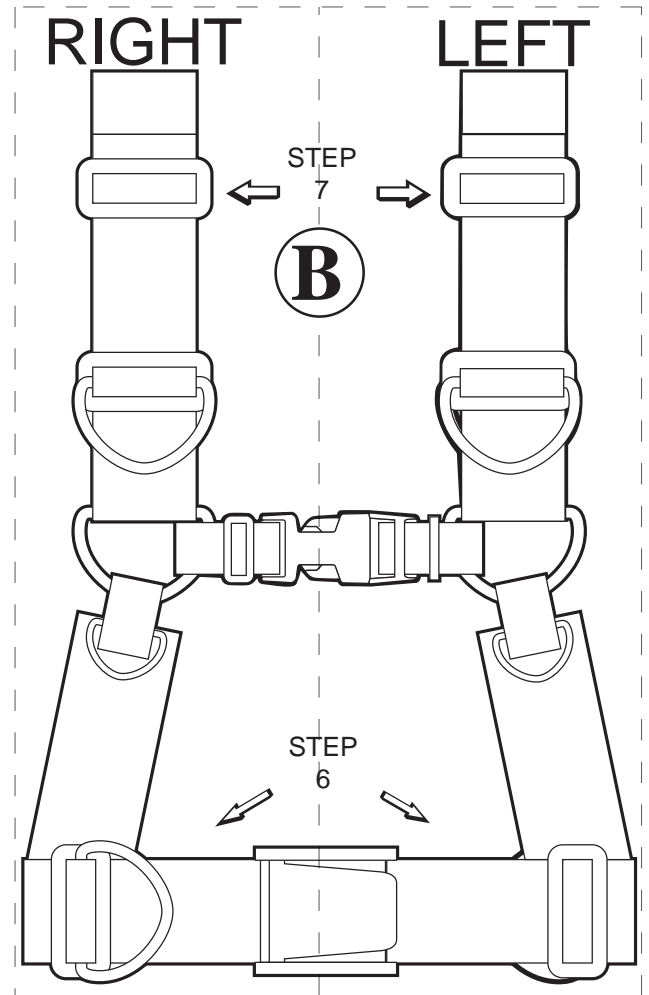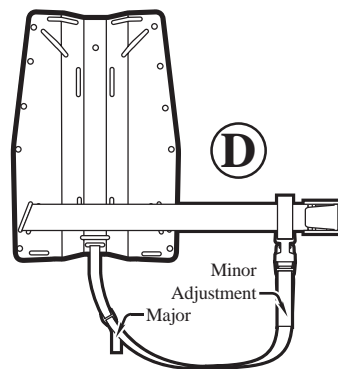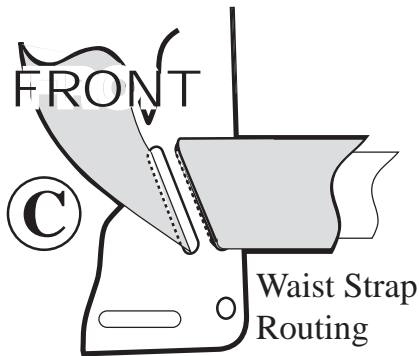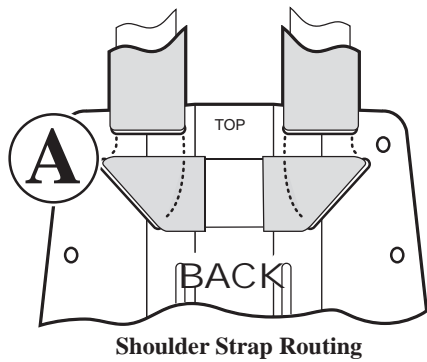

- 1) Begin by threading 2 tubular sleeves onto the 5.5-foot piece of harness webbing. These will end up where the harness goes through the upper harness strap slots, as shown in figure A.
- 2) Thread the 5.5-foot webbing piece through the upper shoulder strap slots, as shown in Figure A, positioning the webbing so it is evenly distributed on each side of the backplate.
- 3) Thread the remaining 2 tubular sleeves onto the 3-foot sections of the webbing, with them ending up where the two sections go through the waist slots, as shown in figure C.
- 4) Using one waist strap assembly, weave the tail end through the two left (as you are looking at the front of the back plate) waist slots - starting from the front, through the inner slot, and back out through the outer slot again.
- 5) Repeat step 4 on the right side with the second waist-strap assembly.
- 6) Using Figure B, install one 2" belt slide and one 2" D-ring on each tail of waist straps.
- 7) Install one plastic 2-inch "grip" belt slide on each shoulder strap.
- 8) Install one 2" belt slide with one 2" bent "D"-ring on each shoulder strap.

- 9) Weave the tail of the each shoulder strap through the corresponding pivot ring located on the waist strap as shown. Then weave the webbing back through both 2" belt slides (Stainless-steel and "grip" type).
- 10) Using right chest-strap assembly (with buckle), loop webbing through right-side pivot-ring and weave back through plastic belt slide.
- 11) Using left chest-strap assembly, loop webbing through left-side pivot-ring and pull tail through ring.
- 12) Weave tail of left chest-strap assembly through the slots in the quick-release buckle of the right-side chest-strap assembly.
- 13) Install the crotch strap components, as shown in figure "D".
- 14) Install the waist-strap release buckle on the same side of the waist-strap as the crotch-strap loop is installed.